


To alternator

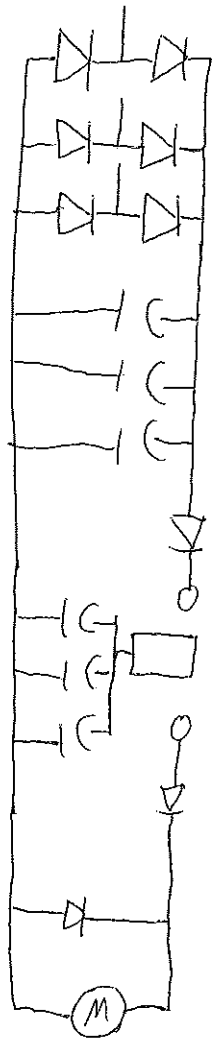

bottom contact of transfer switch

Transfer switch arm triggered by trigger magnets on alternator

Top contact of transfer switch